

Connecting an HID Reader to EWS controller

ver.1.0

The application note explains what settings to be made in PROS software when HID Reader is connected to EWS controller

Minimum requirements:
PROS ver.2.1.2
EWS firmware ver.2.41

Right click on the reader and select “Properties”.

- In the “Basic” tab, for Reader Type leave the default setting (“Proximity”)
- In the “Basic” tab, for Wiegand Type select **“Wiegand26 no parity”**
- Click “Save & Exit”

The screenshot shows a software window titled "Portals\192.168.1.214\Site 3_T&A\IN\Clock IN" with a close button in the top right corner. The window has three tabs: "Basic", "Free Access Time Zones", and "Biometric". The "Basic" tab is active and contains the following settings:

- Name: Clock IN
- Type: Proximity
- Door: IN
- Wiegand type: Wiegand26 no parity
- Enable access by time zones:
- Bypass Antipassback:
- Exit from: Inside
- Entry to: Inside
- Antipassback reset time: 00:00
- Free access 24/7:
- If illegal attempt, disable for minutes

At the bottom center of the window is a "Save & Exit" button.