

New Dynamic QR code with Atlas

WEEKLY REVIEW

28.03.2022

New Dynamic QR code with Atlas



Version 2.6.5 Build 2021-09-20-212805
Copyright © 2011-2021 ZKTeco

Supported by latest Atlas version
(versión 2.6)



QR600-HK



QR600-H



QR600-VK



QR600-V

How to connect

At Atlas, QR600 dynamic readers are always connected **by** Wiegand.

Because the RS485 protocol of Atlas is not the same as the Device.




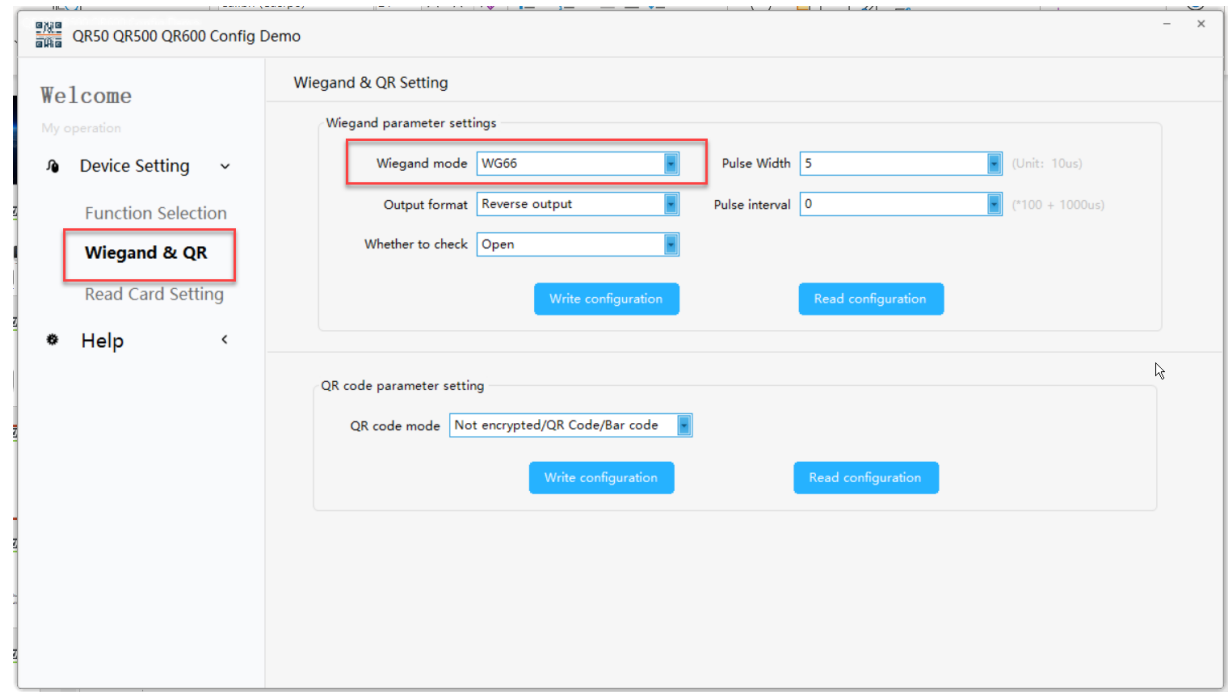
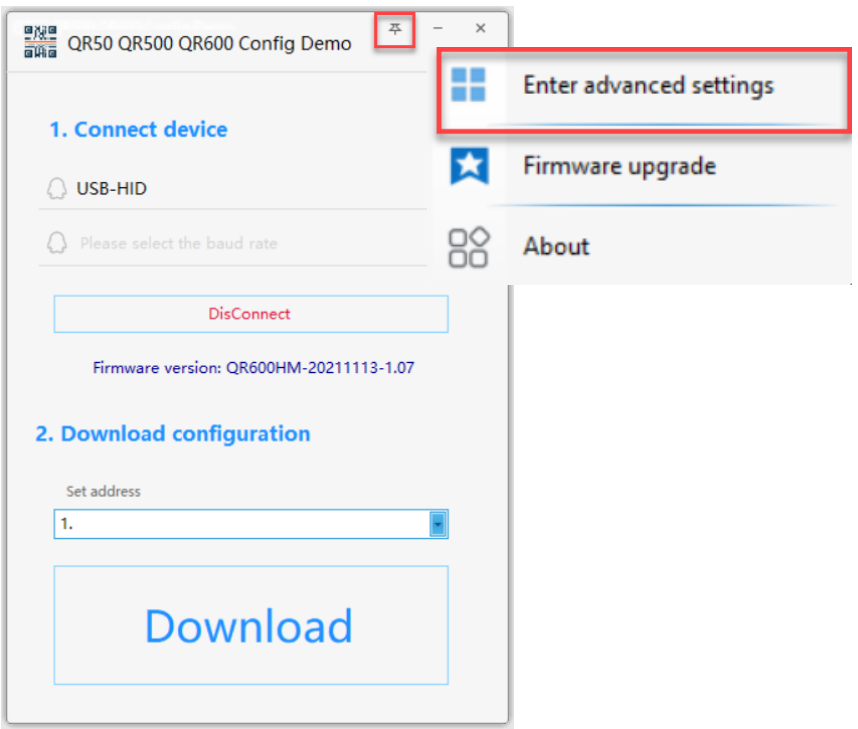
Red: VCC
Black: GND
White: WD1
Green: WD0



QR50 QR500 QR600 Demo Configuration

Software

Download	Date	Files
 QR50-QR500-QR600 Configuration Tool	23/03/2022	Download QR50-QR500-QR600 Configuration Tool



Dynamic QR code configuration in Atlas



In Atlas Card formats QR code wg 66 format must be enabled

Name	Enabled
My Pass	Enabled
QR Code	Enabled

Name: QR Code
Bits: 66



Access

Type	Card Number	Enabled	Share
Standard	82402	<input checked="" type="checkbox"/>	(Unsaved)
QR Code		<input checked="" type="checkbox"/>	(Unsaved)

ZKey Credential Registration

Have the user scan this QR code with the ZKey app:


 

Or, share this registration code with the user, for manual entry into the ZKey app:

2024 5AAA FF61 EBFA

[Copy to clipboard](#)

OK

Install **Atlas Zkey** in Play Store or Apple Store

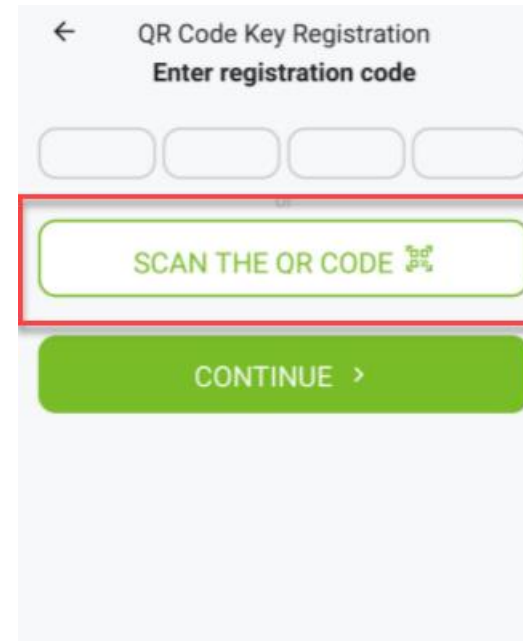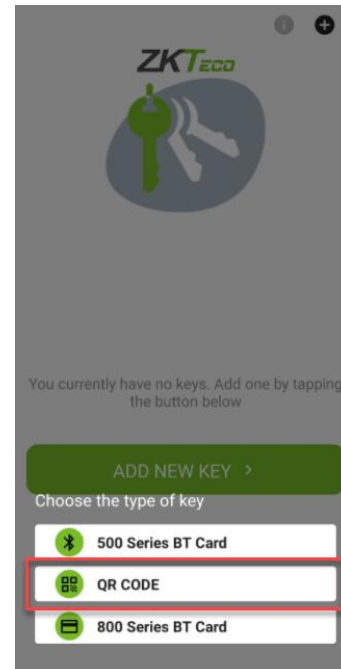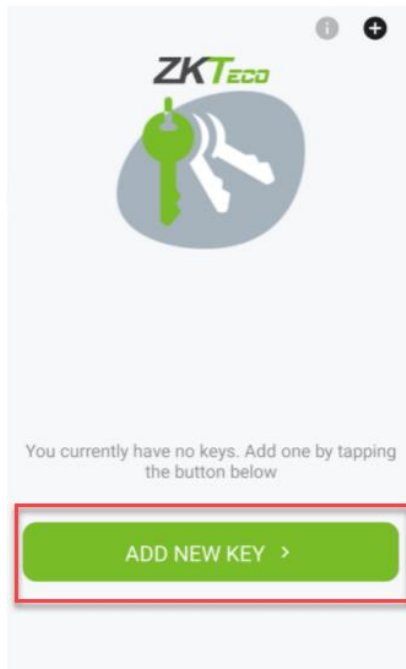

ZKTeco

New Dynamic QR with Atlas

QUESTION TIME