

Model TY-FRFS, TY-FS Special, and TY-FS 57, 80, and 115 K-factor Upright and Pendent Flat Spray Sprinklers

General Description

The Model TY-FRFS, TY-FS Special, and TY-FS, Upright and Pendent, Flat Spray Sprinklers are intended for installation in accordance with CEA 4001 Sprinkler Systems Planning and Installation or EN12845 Automatic Sprinkler Systems – Design, Installation and Maintenance, as applicable. They produce a flatter spray pattern than standard spray sprinklers, enabling them to be used with lower clearance above the suspended open ceilings and in racks.

As necessary the K80 and K115, Flat Spray Sprinklers may be outfitted with guards, shields, or guards with shields. The guards may be used in areas that make the sprinklers susceptible to mechanical or physical damage, whereas the shields may be used to help prevent the sprinklers from being wetted (cold soldered) from water spray of higher elevation sprinklers. Table A provides a detailed matrix of the allowable combinations.

The Model TY-FRFS with its 3 mm diameter heat sensitive bulb element is rated quick response, the Model TYFS Special with its 4 mm diameter heat-sensitive bulb element is rated special response, and the Model TY-FS with its 5 mm diameter heat sensitive bulb element is rated standard response "A."

IMPORTANT

Refer to Technical Data Sheet TFP2300 for warnings pertaining to regulatory and health information.

Always refer to Technical Data Sheet TFP700 for the "INSTALLER WARNING" that provides cautions with respect to handling and installation of sprinkler systems and components. Improper handling and installation can permanently damage a sprinkler system or its components and cause the sprinkler to fail to operate in a fire situation or cause it to operate prematurely.

CEA 4001 Sprinkler Systems Planning and Installation and EN12845 Automatic Sprinkler Systems – Design, Installation and Maintenance permits flat spray sprinklers to be used in concealed spaces, suspended open ceilings, and in racks.

NOTICE

Model TY-FRFS, TY-FS Special, and TY-FS Sprinklers, as well as guard/ shield accessories, described herein must be installed and maintained in compliance with this document, as well as with the applicable standards recognized by the approval agency, in addition to the standards of any other authorities having jurisdiction. Failure to do so may impair the performance of these devices.

The owner is responsible for maintaining their fire protection system and devices in proper operating condition. Contact the installing contractor or product manufacturer with any questions.

Sprinkler Identification Numbers (SINs)

Model TY-FRFS (3 mm Bulb)

TY1136 - Upright K57

TY1236 - Pendant K57

TY3136 – Upright K80

TY3236 – Pendent K80 TY4136 – Upright K115

TY4236 – Pendent K115

Model TY-FS Special (4 mm Bulb)

TY1146 – Upright K57

TY1246 - Pendent K57

TY3146 - Upright K80

TY3246 - Pendent K80

TY4146 - Upright K115

TY4246 - Pendent K115

Model TY-FS (5 mm Bulb)

TY1156 - Upright K57


TY1256 - Pendent K57

TY3156 - Upright K80

TY3256 - Pendent K80

TY4156 - Upright K115

TY4256 - Pendent K115

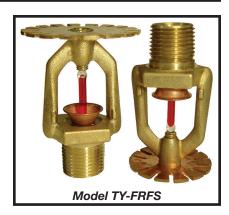





Operation

The glass bulb contains a fluid which expands when exposed to heat. When the rated temperature is reached, the fluid expands sufficiently to shatter the glass bulb, allowing the sprinkler to activate and water to flow.

TFP635

Page 2 of 8

Series	Bulb Size	Orifice	Position	SIN	Approvals	Guard	Shield	Guard/Shield
TY-FRFS	3 mm	K57, 10 mm	Upright	TY1136	LPCB, VdS	N/A	N/A	N/A
TY-FS Special	4 mm			TY1146	VdS	N/A	N/A	N/A
TY-FS	5 mm			TY1156	LPCB, VdS	N/A	N/A	N/A
TY-FRFS	3 mm		Pendent	TY1236	LPCB, VdS	N/A	N/A	N/A
TY-FS Special	4 mm			TY1246	VdS	N/A	N/A	N/A
TY-FS	5 mm			TY1256	LPCB, VdS	N/A	N/A	N/A
TY-FRFS	3 mm	K80, 15 mm	Upright	TY3136	LPCB, VdS	G1	N/A	N/A
TY-FS Special	4 mm			TY3146	VdS	G1	N/A	N/A
TY-FS	5 mm			TY3156	LPCB, VdS	G1	N/A	N/A
TY-FRFS	3 mm		Pendent	TY3236	LPCB, VdS	G1	H1 or H2	G1/H1 or G1/H2
TY-FS Special	4 mm			TY3246	VdS	G1	H1 or H2	G1/H1 or G1/H2
TY-FS	5 mm			TY3256	VdS	G1	H1 or H2	G1/H1 or G1/H2
TY-FRFS	3 mm	K115, 20 mm	Upright	TY4136	LPCB, VdS	G1	N/A	N/A
TY-FS Special	4 mm			TY4146	VdS	G1	N/A	N/A
TY-FS	5 mm			TY4156	VdS	G1	N/A	N/A
TY-FRFS	3 mm		Pendent	TY4236	VdS	G1	H1 or H2	G1/H1 or G1/H2
TY-FS Special	4 mm			TY4246	VdS	G1	H1 or H2	G1/H1 or G1/H2
TY-FS	5 mm			TY4256	VdS	G1	H1 or H2	G1/H1 or G1/H2

TABLE A ALLOWABLE COMBINATIONS OF GUARDS, SHIELDS, AND GUARDS WITH SHIELDS

Technical Data

Approvals

VdS Approved for installation per CEA 4001 Sprinkler Systems Planning and Installation or EN12845 Automatic Sprinkler Systems -Design, Installation, and Maintenance

LPCB Approved (See Table A)

The Guards, Shields, and Guards with Shields are VdS Approved with the combinations of product shown in Table A

For details contact: Johnson Controls Enschede, Netherlands Tel. 31-53-428-4444 Fax 31-53-428-3377

Maximum Working Pressure

12,1 bar

Discharge Coefficient

K=57 Lpm/bar^{1/2} K=80 Lpm/bar^{1/2} K=115 Lpm/bar^{1/2}

Temperature Ratings (°C)

57, 68, 79, 93, and 141

Finishes

Sprinklers: Natural Brass

Guards: Red Painted / Zinc Chromate

Shields: Zinc Chromate


Physical Characteristics


Frame	Bronze
Button	nze/Copper
Sealing Assembly Beryllium Nickel	w/TEFLON
Bulb	Glass
Compression Screw	Bronze
Deflector	Copper
Guard	arbon Steel
Shield	arbon Steel
Shield Spring	arbon Steel


Design **Criteria**


The Model TY-FRFS, TY-FS Special, and TY-FS Flat Spray Sprinklers are only intended for installation per CEA 4001 Sprinkler Systems Planning and Installation or EN12845 Automatic Sprinkler Systems - Design, Installation and Maintenance where flat spray sprinklers are permitted.


Note: In all cases, CEA 4001 Sprinkler Systems Planning and Installation or EN12845 Automatic Sprinkler Systems - Design, Installation and Maintenance must be referenced and followed to ensure an effective installation. The Flat-Spray Sprinklers have significantly different water distribution characteristics from that of conventional and spray pattern sprinklers that has enabled the Flat-Spray Sprinklers to be used in conformance with CEA 4001 Sprinkler Systems Planning and Installation or EN12845 Automatic Sprinkler Systems - Design, Installation and Maintenance.

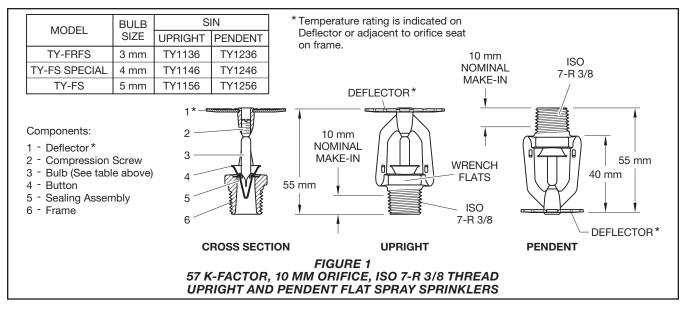


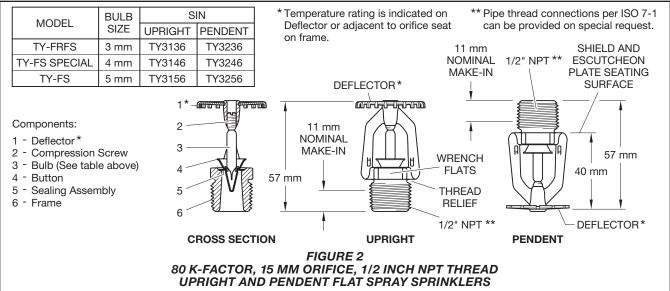


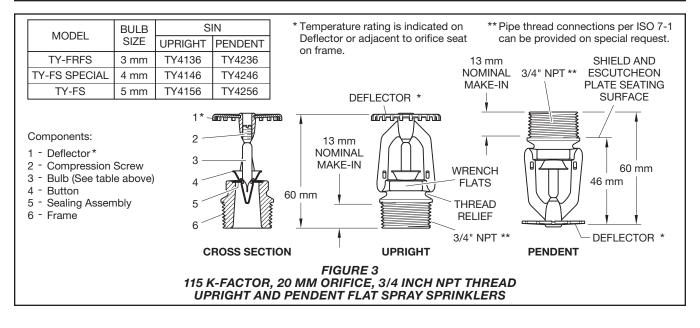


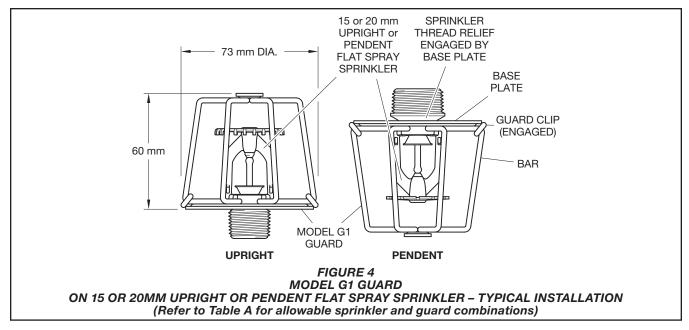

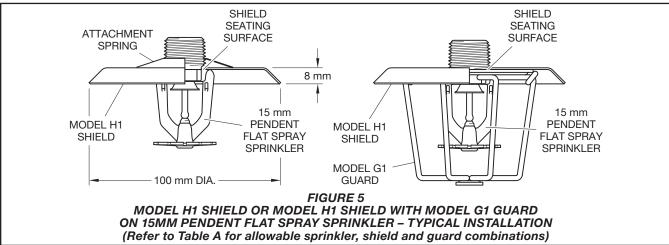

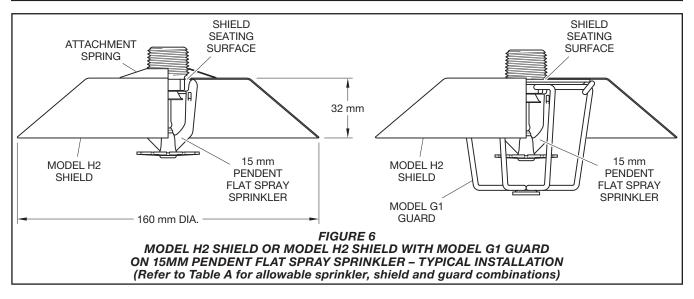

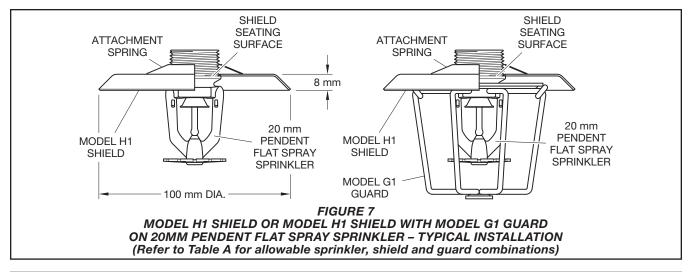

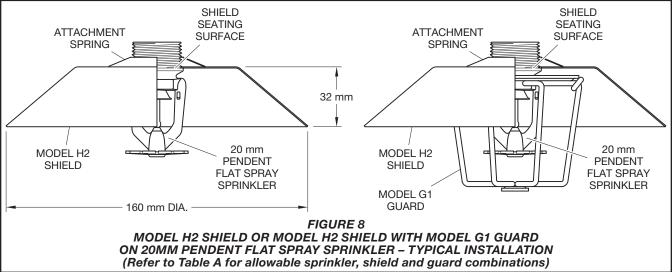

Installation

Installation instructions are provided in the following subsections:

- Sprinkler Only Installation
- · Sprinkler with Guard Installation
- Sprinkler with Shield Installation
- Sprinklers with Guard and Shield Installation

See the Sprinkler Only Installation subsection for general instructions.

Sprinkler Only Installation

The Model TY-FRFS, TY-FS Special, and TY-FS Sprinklers must be installed in accordance with this section.

General Instructions

Do not install any bulb type sprinkler if the bulb is cracked or there is a loss of liquid from the bulb. With the sprinkler held horizontally, a small air bubble should be present. The diameter of the air bubble is approximately 1,6 mm for 57°C to 2,4 mm for the 141°C temperature ratings.

A leak-tight ISO 7-R 3/8 sprinkler joint should be obtained by applying a minimum-to-maximum torque of 8 to 16 N·m.

A leak tight 1/2 in. NPT sprinkler joint should be obtained by applying a minimum-to-maximum torque of 9,5 to 19,0 N·m.

A leak tight 3/4 in. NPT sprinkler joint should be obtained by applying a minimum-to-maximum torque of 13,4 to 26,8 N·m. Higher levels of torque may


distort the sprinkler inlet and cause leakage or impairment of the sprinkler.


Do not attempt to make-up for insufficient adjustment in the escutcheon plate by under- or over-tightening the sprinkler. Readjust the position of the sprinkler fitting to suit.


Note: Pendent sprinklers are to be installed in the pendent position; upright sprinklers are to be installed in the upright position.

Step 1. With pipe thread sealant applied to the pipe threads, hand-tighten the sprinkler into the sprinkler fitting.

Step 2. Tighten the sprinkler into the sprinkler fitting using only the W-Type 6 Sprinkler Wrench (See Figure 10). With reference to Figures 1, 2, and 3 the W-Type 6 Sprinkler Wrench is to be applied to the wrench flats.

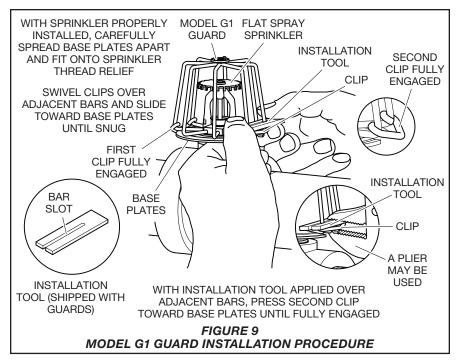

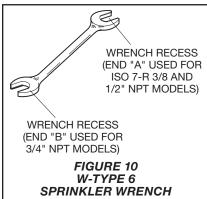

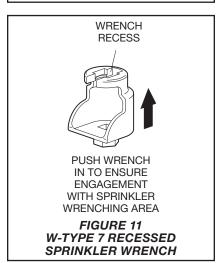

Sprinkler with Guard Installation

With reference to Figures 4 and 9, 15 mm or 20 mm Upright or Pendent Sprinklers with Model G1 Guard must be installed in accordance with this section:

Step 1. The G1 Guard is to be mounted on the sprinkler after the sprinkler has been installed in accordance with the Sprinklers Only Installation subsection.

Step 2. With the Clips loose, first spread the two halves of the Sprinkler Guard just enough to pass by the sprinkler deflector from the side. Then, once again spread the two halves of the Sprinkler Guard just enough to pass over the Thread Relief portion of the sprinkler. (See Figures 2 and 3)

Step 3. With the Sprinkler Guard positioned on the Thread Relief portion of the sprinkler, as applicable, engage the Clips and then slide the Clips until they seat against the Base Plate to complete the installation as shown in Figure 4.

To help assist with the sliding of the Clips, the Guard Installation Tool maybe used as shown in Figure 9. In addition, pliers can be used to facilitate the final seating of the Clips.

Note: The Clips must seat against the Base Plate in order to be considered fully seated and in order to complete the installation.

The G1 Guard may be located in any position relative to the sprinkler frame arms.

Sprinkler with Shield Installation

With reference to Figures 5, 6, 7, or 8, 15 mm or 20 mm Pendent Sprinklers with Model H1 or Model H2 Shield must be installed in accordance with this section:

Note: Pendent sprinklers are to be installed in the pendent position.

Step 1. With pipe thread sealant applied to the pipe threads, install the Shield over the sprinkler threads.

Step 2. Place the Attachment Spring over the sprinkler threads, seating it against the Shield.

Step 3. Hand-tighten the sprinkler into the sprinkler fitting.

Step 4. Tighten the sprinkler into the sprinkler fitting using only the W-Type 7 Recessed Sprinkler Wrench (See Figure 11). The wrench is to be applied to the sprinkler wrenching area shown in Figures 2 or 3, as applicable.

Note: When installed correctly, the Attachment Spring will be slightly compressed and the Shield will be held firmly in place.

Sprinkler with Guard and Shield Installation

With reference to Figures 5, 6, 7, or 8, 15 or 20 mm Pendent Sprinklers with Model H1 or Model H2 Shield and Model G1 Guard must be installed in accordance with this section:

Note: Pendent sprinklers are to be installed in the pendent position.

Step 1. With pipe thread sealant applied to the pipe threads, install the Shield over the sprinkler threads.


Step 2. When installing K115 Sprinklers, place the Attachment Spring over the sprinkler threads, seating it against the Shield.

Note: An Attachment Spring is not utilized for K80 Sprinklers with Guard and Shield.

Step 3. Hand tighten the sprinkler into the sprinkler fitting.

Step 4. Tighten the sprinkler into the sprinkler fitting using only the W-Type 7 Sprinkler Wrench (See Figure 11). The wrench is to be applied to the sprinkler wrenching area shown in Figures 2 or 3, as applicable.

Step 5. After the sprinkler with shield is installed into the sprinkler pipe fitting, install the guard as described in the Sprinkler with Guard Installation subsection.

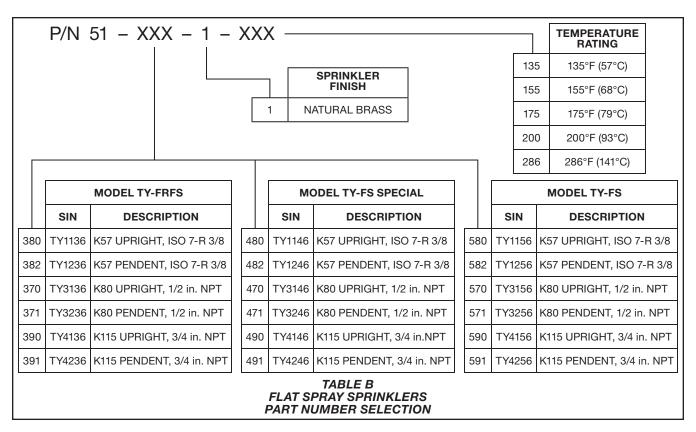

Care and Maintenance

The Model TY-FRFS, TY-FS Special, and TY-FS Sprinklers must be maintained and serviced in accordance with this section:

Before closing a fire protection system main control valve for maintenance work on the fire protection system that it controls, permission to shut down the affected fire protection system must be obtained from the proper authorities and all personnel who may be affected by this action must be notified.

Sprinklers that are found to be leaking or exhibiting visible signs of corrosion must be replaced.

Automatic sprinklers must never be painted, plated, coated or otherwise altered after leaving the factory. Modified sprinklers must be replaced. Sprinklers that have been exposed to corrosive products of combustion, but have not operated, should be replaced if they cannot be completely cleaned by wiping the sprinkler with a cloth or by brushing it with a soft bristle brush.

Care must be exercised to avoid damage to the sprinklers before, during, and after installation. Sprinklers damaged by dropping, striking, wrench twist/slippage, or the like, must be replaced. Also, replace any sprinkler that has a cracked bulb or that has lost

liquid from its bulb. Refer to the Installation section fr additional information.

The owner is responsible for the inspection, testing, and maintenance of their fire protection system and devices in compliance with this document, as well as with the applicable standards of the authorities having jurisdiction. Contact the installing contractor or product manufacturer with any questions.

It is recommended that automatic sprinkler systems be inspected, tested, and maintained by a qualified Inspection Service in accordance with local requirements and/or national codes.

Limited Warranty

For warranty terms and conditions, visit www.tyco-fire.com.

Ordering Procedure

Contact your local distributor for availability. When placing an order, indicate the full product name and part number

Note: Sprinklers, wrenches, guards, shields, attachment springs, and additional clip installation tool are all sold separately.

Sprinkler Assemblies

Specify: Model (TY-FRFS, TY-FS Special, or TY-FS), (specify SIN), (specify Standard , Special, or Quick) Response, (specify 57, 80, or 115) K-factor, (specify temperature rating), (specify Pendent or Upright) Sprinklers, P/N (specify from Table B)

Sprinkler Wrenches

Specify: W-Type (specify) Sprinkler Wrench, P/N (specify):

W-6..... 56-000-6-387 W-7..... 56-850-4-001

Guards

Specify: Model G1 Guard with (specify) finish, P/N (specify):

Red Painted 56-000-6-387 Zinc Chromate 56-850-4-001

Shields

Specify: Model (specify), (specify NPT size) Shield, P/N (specify):

H1, 1/2 in. NPT......22521 H1, 3/4 in. NPT. 22522 H2, 1/2 in. NPT. 22529

Attachment Springs

Specify: (specify NPT size) Shield Spring, P/N (specify):

Additional* Clip Installation Tool Specify: Clip Installation Tool for G1 Guard, P/N 56-000-8-597

^{*} The Clip Installation Tool is included with guard orders in original cartons.

TFP635

Page 8 of 8

